



Air Mixer for Propane Is Recommended for Propane Burners. See Instructions included with the appliance

Minimum 18 in.<sup>2</sup> of Cross Ventilation on Each Side of the Enclosure

Standard Light Switch - 110VAC  
Outside of the Firepit

110V Outlet

110V to 12V Transformer

Bluetooth Adapter

Pilot Igniter Burner Burner Pan

Ignition Control Box

110V

110V

12VAC

Keep Transformer Minimum 5' Away From Any Body Of Water

## CLEARANCE FROM COMBUSTIBLES.

THIS DIAGRAM APPLIES TO ALL FIRE PITS AND FIRE FEATURES

### Flooring

All fire pits and fire features must be installed on non-combustible flooring. If the fire feature is installed on a combustible floor, such as wood decking, a non combustible floor paneling MUST be properly installed underneath.

### Installation

We suggest that our products be installed by professionals that are locally licensed by the authority having jurisdiction in gas piping.

### Service

We suggest that our products be serviced by a professional certified in the US by the National Fireplace Institute (NFI) as NFI Gas Specialists



Min. 96" Overhead Clearance

Min. 48" Clearance

Min. 48" Clearance

Min. 18" Clearance from the Burner to the Floor

Non-Combustible Floor Paneling (Only when floor is combustible)

Cross Ventilation on Opposite Sides

Non-Combustible Flooring

